

Overview of AR-Cluster User Commands

The following list is a summary of AR-Cluster commands. The upper case part of the commands is required and the lower case part of the command is optional. Thus the command **A/F** is the same as the **ANNOUNCE/FULL** command.

A nnounce	A	Announcement to all locally users
A nnounce/ F ull	A/F	Announcement to all users
B ye	B	Terminate the connection to the cluster
C LEAR/ Q SL	C LEAR/ Q SL	Remove a QSL route from the local QSL database.
C ONFE r ence	C ONFE	Enter a local conference
C ONFE r ence/ F ull	C ONFE/ F	Enter a network wide conference
D B	D B	Built in database information
D Eelete	D E	Delete a mail message
D Irectory	D I	List mail messages
D x	D	Enter as DX spot
H elp	H	Command for help
L ist	L	List mail messages
Q uit	Q	Terminate the connection to the cluster
R ead	R	Read a mail message
R E P ly	R EP	Reply to a mail message
S end	S	Send a mail message
S Et/ A NNouncements	S E/ A NN	Turn on announcements
S Et/ B Eep	S E/ B E	Turn on a beep for DX and Announcement spots
S Et/ D X Announcements	S E/ D X A	Activate DX spots
S Et/ D X S qth	S E/ D X S	Turn on the display of the spotter QTH
S Et/ E MAIL	S E/ E MAIL	Set your Internet email address
S Et/ F ILTER	S E/ F ILTER	Set the spot filters
S Et/ H E r e	S E/ H E	Let other know you are at your station
S Et/ H O M enode	S E/ H O M	Set your home node
S Et/ L O C A t ion	S E/ L O C A	Set the location (lat/lon) of your station
S Et/ L O G IN announcements	S E/ L O G IN	Show user logins
S Et/ N ame	S E/ N	Set your name

SEt/NOAnnouncements	SE/NOA	Turn off announcements
SEt/NOBeep	SE/NOB	Turn off the beep for DX and Announcements
SEt/NODX Announcements	SE/NODX	Turn off DX announcements
SEt/NODXSqth	SE/NODXS	Turn off the display of the spotter QTH
SEt/NOHere	SE/NOH	Indicate you are away from your station
SEt/NOLOGin announcements	SE/NOLOG	Turn off login announcements
SEt/NOTalk	SE/NOT	Turn off the display of talk messages
SEt/NOWWV announcements	SE/NOWWV	Turn off the display of WWV spots
SEt/NOWX announcements	SE/NOWX	Turn off the display of weather announcements
SEt/PHONE	SE/PHONE	Set your phone number
SEt/QSL	SE/QSL	Add a QSL route to the local database
SEt/QTH	SE/QTH	Set your location (city, etc.)
SEt/Talk	SE/TA	Turn on the display of talk messages
SEt/WWV announcements	SE/WWV	Turn on the display of WWV spots
SEt/WX announcements	SE/WX	Turn on the display of weather announcements
SHow/ANnounce	SH/AN	Show previous announcements
SHow/ARCHive	AH/ARCH	Show the files in the archive folder
SHow/BUcmaster	SH/BUc	Show callbook information for a specified callsign
SHow/BULLEtins	SH/BULLE	Show the files in the bulletins folder
SHow/CBA	SH/CBA	Show callbook information for a specified callsign
SHow/CLuster	SH/CL	Show the configuration of the cluster
SHow/Configuration	SH/C	Show the users on the node
SHow/Dx	SH/D	Show previous DX spots
SHow/Dx SQL	SH/D SQL	Query for past DX using SQL
SHow/EMAIL	SH/EMAIL	Show a users Internet email address
SHow/FDx	SH/FD	Display a formatted SH/DX command
SHow/FILEs	SH/FILE	Show the files in the files folder
SHow/FILTER	SH/FILTER	Show the current DX spot filters
SHow/FITu	SH/FIT	Display a formatted SH/ITU
SHow/FZOne	SH/FZO	Display a formatted SH/ZONE

SHow/Grid	SH/G	Show the MaidenHead grid locator for a station
SHow/HAM	SH/HAM	Show callbook information for a specified callsign
SHow/Heading	SH/H	Show the heading and distance to a station
SHow/HOMEnode	SH/HOME	Show a users homenode
SHow/ITu	SH/IT	Show past DX based on a ITU zone
SHow/LOCation	SH/LOC	Show the location (lat/lon) of a station
SHow/LOG	SH/LOG	Show the node logins for a call
SHow/Muf	SH/M	Show the MUF for a country
SHow/NEeds	SH/NE	Show the CTY needs for a station
SHow/NOdes	SH/NO	Displays a list of nodes in the network
SHow/Prefix	SH/P	Show the prefix information for a call
SHow/Qsl	SH/Q	Show QSL information for a call
SHow/STation	SH/ST	Show detail information for a call
SHow/Sun	SH/S	Show the sunrise/sunset for a location
SHow/TAlk	SH/TA	Show past talk messages
SHow/TIme	SH/TI	Show the time
SHow/TIP	SH/TIP	Show a tip about using the cluster
SHow/UPTime	SH/UPT	Shows the uptime of the node
SHow/Users	SH/U	Shows the users connected to the node
SHow/Version	SH/V	Shows the AR-Cluster software version
SHow/WWv	SH/WW	Shows past WWV information
SHow/WX	SH/WX	Show past weather announcements
SHow/WXStation	SH/WXS	Show data from a optional weather station
SHow/Zone	SH/Z	Show past DX based on a CQ zone
Talk	T	Talk to a station
Talk/TimeStamp	T/T	Talk to a station with a timestamp
Type/ARChive	T/ARC	Display a file in the archive folder
Type/BULletins	T/BUL	Display a file in the bulletin folder
Type/FILes	T/FIL	Display a file in the files folder
Wwv	W	Send a WWV spot to the cluster

WX	WX	Make a local weather announcement
WX/Full	WX/F	Make a weather announcement to the network